

Quick guide:

How to get your monitoring up and running

1.1 **Activating the WiFi Access Point**

Follow these steps to activate the WiFi hotspot:

On your inverter, push the UP arrow then left/right buttons to go to the 'SETUP' menu -> 'WiFi Access Point' -> 'Activate WiFi AP?' -> Yes. You can use the ↵ to select your options.




1.2 **Connecting to the Fronius WIFI hotspot on your computer**

From here, all settings can be changed on an internet browser connected to the inverter's wifi. **On your computer**, connect to the Fronius WIFI network (Fronius 240.xxxxx) Password is always 12345678


Open the Datamanager Web Interface

Open a web browser (Internet Explorer, Chrome, Safari, etc) and go directly to <http://169.254.0.180>

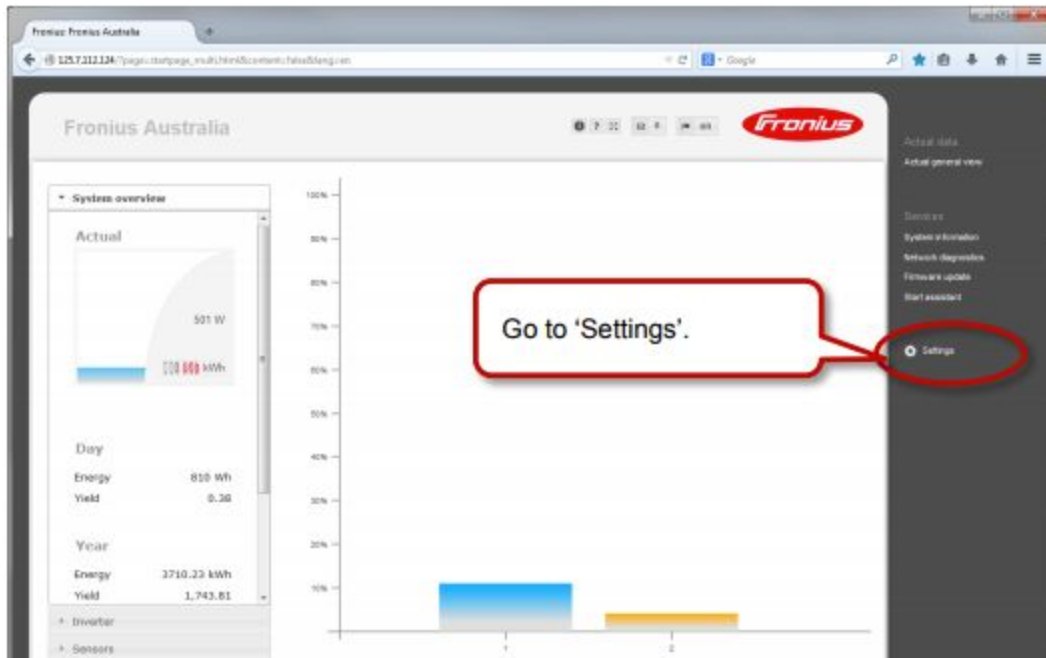

Enter username and password

The Datamanager settings are sometimes password protected. To enter type in username (usually 'admin') and the password is either "sunc1234" or "suncommon1". If neither of these work, we will have to ask Fronius.

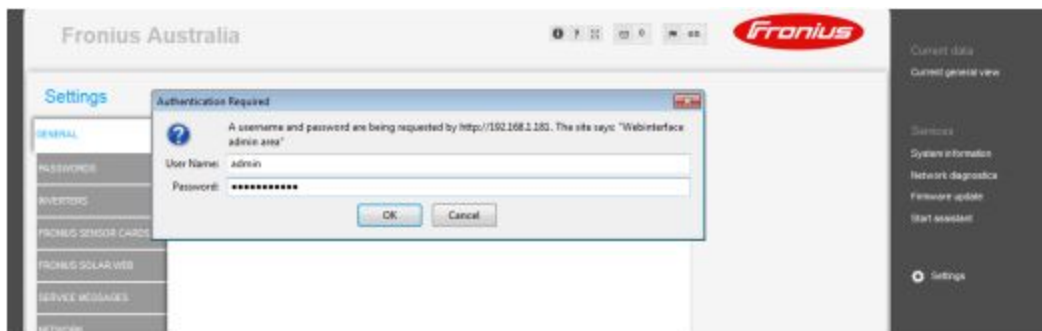

1.3 Change the WiFi network

If the internet connection has been changed the network settings can be adapted on the 'Settings' page. Therefore go to NETWORK as shown in the picture below.



Then select your HOME WiFi network; press 'Set...'



Enter the home WiFi network's password into the pop up window



Scroll to the top of the page and save the settings

